4 - TERMS OF THE WARRANTY :

As the original purchaser of this equipment has purchased from Emaux Water Technology Co Ltd, through Authorized International Distributor or Dealer, warrants its products free from defects in materials and workmanship under normal use during the warranty period. The warranty period begins on the day of purchase and extends only to the original purchaser. It is not transferable to anyone who subsequently purchases the product from you. It excludes all expendable parts.

During the warranty period, Emaux authorized reseller will repair or replace defective parts with new parts or, at the option of Emaux, serviceable used parts that are equivalent or superior to new parts in performance.

This Limited Warranty extends only to products purchased from Emaux authorized resellers. This Limited Warranty does not extend to any product that has been damaged or rendered defective.

- (a) as a result of an accident, misuse, or abuse;
- (b) as a result of an act of God;
- (c) by operation outside the usage parameters stated herein;
- (d) by the use of parts not manufactured or sold by Emaux;
- (e) by modification of the product;
- (f) as a result of war or terrorist attack; or

(g) as a result of service by anyone other than Emaux authorized reseller or authorized agent.

EXCEPT AS EXPRESSLY OUTLINED IN THIS WARRANTY, EMAUX MAKES NO OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. EMAUX EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS EXPRESS LIMITED WARRANTY.





WATER LEVEL REGULATOR

MANUAL INSTALLATION .

MODEL : RO 7

MANUAL INSTALLATION

WATER LEVEL REGULATOR


Model :RO 7 Codes :88570203

IMPORTANT : This instruction manual includes essential information on the safety measures to be implemented for installation and start up . Therefore the installer as well as the user must read the instructions before starting installation and start up . Keep this manual for future reference

<u>1</u>.-WATER LEVEL REGULATOR :

Water level regulator allows fresh water to refill the pool when the pool water level is low due to evaporation ,water loses for the bathers etc .

A float in the water level regulator is connected to the fresh water source through a valve .When the pool water level is low the float is at a low position and opens the valve letting the fresh water come in Once the float position reaches to the maximum water level it closes the valve .

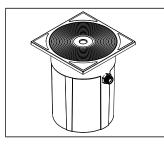

2 .-INSTALLATION :

Water level regulator is installed near to the pool and connected to the pool through a pipe 50 mm Metric model) or 1 ¹/₂" In(perial model).

There are two different connections options bottom connection or lateral connections .

The fresh water pipes connection is 20 mm or ³/₄" BSP .

Maximum working pressure is 2 5 bar.

3 .-SPARE PARTS LIST :

CODE	PRODUCT DESCRIPTION
01050158	Skimmer Lid
89150708	Square Rim with lid
89150709	Level regulator float arm assembly
89150710	Adjustable nozzle
89150711	Valve assembly
89150712	Fixation valve unit
01050175	Level regulator
01170009	1.5" conversion Connector
571154566	Hexagonal foam Buckle
	01050158 89150708 89150709 89150710 89150711 89150712 01050175 01170009

