




CyberSync Chemical Controller

INSTALLATION AND OPERATION MANUAL

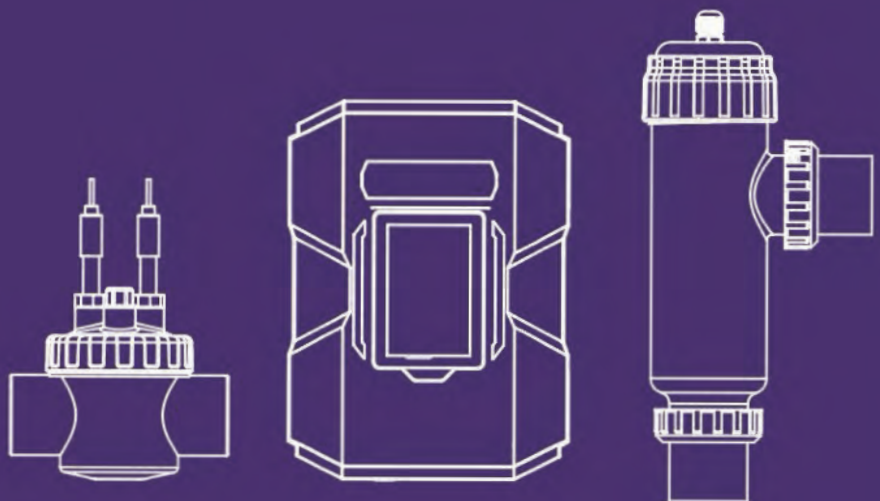

CyberSync

RoHS
DIRECTIVE
2011/65/Eu

SAA



Intertek
4004062
Conforms to UL Std. 1081.
Certified to CSA Standard
C22.2 No. 218.1
DATA CODE: MMY

TABLE OF CONTENTS

Section	Sub section	Page
IN THE BOX	check list	2
SAFETY INFORMATION	safety and warnings	3
INTRODUCTION	introduction features	4
INSTALLATION	connecting accessory cables	5
	probes & probe holder	6
	hardware: peripherals	6
	hardware: control unit	7
CONTROLS	Home Screen	8
SET UP	electrolysis, measurement	9
DOSING	general device condition	10
SWITCHES	pump & accessory switches	11
SMART LIFE	network, app screen	12
	app installation, set up	13
SALT	calculating salt adding salt	14
MAINTENANCE	cleaning the cell calibrating probes	15
SPECIFICATIONS	products & accessories	16
WARRANTY	product details	17
NOTES		18

IN THE BOX

Welcome, and thank you for purchasing a high quality product from Emaux.
Please check the contents of the box and read through this manual before starting any installations.



Item	Description	Check
1	THIS USER MANUAL	
2	CONTROL UNIT with power cord 2m	
3	CHLORINATOR CELL with cable 3m. Electrode inside for 20, 30, or 40 gram	
4	PROBE HOLDER For 1½" (38mm) PVC pipes (reducer required for 2" pipes)	
5	FLOW SWITCH HOLDER. Fits 1½" (38mm) and 2" (55mm) pipes	
6	FLOW SWITCH with grommet and protective cap and 1.40m cable	
7	ORP PROBE (red) and user manual. Measuring range 300 to 900 mV.	
8	PH PROBE (blue) and user manual. Measuring range pH 0 to 14. 3m cable.	
9	SALINITY PROBE (black) and user manual. Measuring range 1000 to 35000 ppm. 3m cable.	
10	TEMPERATURE PROBE. 1.40m cable	
11	CELL UNIONS FOR 1½" (38mm) (2), and 2" (55mm) (2) PIPES, O-rings (2) and retaining rings (2)	
12	PROBE HOLDER ADAPTERS (3), and RUBBER GROMMETS (4)	
13	CALIBRATION BUFFERS (3): pH 4 , pH 7 , ORP256 mV	
14	TEFLON TAPE (1) for probe adapters	
15	FIXING SCREWS (3) and WALL PLUGS (3) for control unit	

SAFETY INFORMATION



Shock

This appliance must be installed in accordance with national wiring codes and with a means of disconnection incorporated in any fixed wiring. High voltage can shock, burn, or cause death.

This product should be installed and repaired by a technician who is qualified in the installation and maintenance of indoor pool/spa products. Please read this manual before installing the product. The instructions in this manual can be followed exactly. Disconnect electrical power before removing the cover for servicing unit. Replace all screws and covers before reconnecting the unit to electric power. Incorrect installation and/or operation can cause serious injury, property damage, or death. To reduce the risk of injury, do not permit children to use this product. Improper installation and/or operation will void the warranty.

IMPORTANT SAFETY INSTRUCTIONS

This appliance is classified as Class II (double insulated) equipment. It provides protection against electric shock by means of double or reinforced insulation and does not rely on a protective earth connection. When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

READ AND FOLLOW ALL INSTRUCTION.

- (1) To reduce the risk of injury, service person should only be qualified pool service professionals.
 - (2) **WARNING** - To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.
 - (3) **WARNING** - Risk of Electric Shock. Connect only to a branch circuit protected by ground-fault circuit-interrupter(GFCI). Contact a qualified electrician if you cannot verify that the circuit is protected by a GFCI.
 - (4) The unit must be connected only to a supply circuit that is protected by a ground-fault circuit-interrupter(GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push the reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the pump without the test button being pushed, a ground current is flowing, indicating the possibility of an electric shock. Do not use this pump. Disconnect the pump and have the problem corrected by a qualified service representative before using.
 - (5) If the electrolytic unit housing is damaged or improperly assembled, the user is cautioned not to energize or operate the unit;
 - (6) Properly disassemble and reassemble the electrolytic device for cleaning. For details, see "CLEANING THE TITANIUM CELL".
 - (7) This application is equipped with Type Y attachment power supply. if the supply cord is damaged, it shall be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
 - (8) Mounting location of the cell, including minimum 4.5m distance from the walls of the pool
 - (9) **WARNING** – To reduce the risk of electric shock replace damaged cord immediately.
 - (10) Before servicing, unplug the power plug from the electrical socket and allow the device to cool for at least 15 minutes.
 - (11) Mounting location of the supply unit at least 1.5m (or more, if required by local regulation) form the pool;
 - (12) Do not to energize or operate the unit if the cell housing is damaged or improperly assembled.
- [Save these instructions.](#)



CAUTION
Burn hazard.
Hot surface.
Do not touch.

Burn danger

Always unplug the device from its socket or power source and allow it to cool before opening the enclosure. There is _high risk of shock and burn injuries from touching the internal components.



WARNING
Compressed air.
Lock-out source
and bleed off
pressure before
servicing equipment.

Compressed air hazard

The plastic enclosure housing of the titanium cell can become pressurized. To avoid explosion and serious injury the cell must be only be operated with the pump running and with the valves fully open for unrestricted water flow .



For swimming pools and spa use only.

Not be used for purifying drinking water.

*Only one pump and one underwater light system may be connected directly to this unit . The current loading of the connected pump must not exceed 8 Amp . For higher loads, a relay must be used .




This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Waste disposal /recycling

This symbol indicates that this product or its packaging may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. Correct disposal helps prevent damage to health and the environment. For more information about the recycling of this product, please contact your local council waste disposal service, or the shop that sold the product.

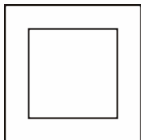

Double insulated(Class II) , no protective earth required.



This device is intended for indoor use only in dry locations. Do not expose to dripping or splashing water and do not use outdoors.

INTRODUCTION and FEATURES


The Emaux CyberSync Chemical Controller is an innovative system that combines a salt water chlorine generator that can use pool salt or sea water to provide a safer and more environmentally friendly alternative to traditional methods of adding chlorine to the pool water. This advanced controller also continuously monitors and displays the pool water status. It has built-in features that add smart pool functions to connected accessories such as your pump, chemical dosing pumps, lights, other disinfection systems, heater, and pool cover.

Additionally, the Smart Life app includes scheduling and automated functions, enabling you to effortlessly monitor and manage your pool from your smartphone or tablet anytime, anywhere.

Chlorine is a highly effective sanitizing agent which is commonly used in swimming pools. It can prevent the growth of bacteria and algae. In this system salt (NaCl) in the swimming pool water is broken down by electrolysis to produce chlorine gas (Cl₂). Chlorine production is regulated from the control unit by altering the electric current flowing through the titanium electrode in the cell housing.

Water chemistry

The salt electrolysis cell of the CyberSync Chemical Controller needs a recommended pool water salt concentration of 3000 to 5000 ppm to function. See table on page 14.



 The EMAUX Chlorinator does not maintain the water chemistry of your swimming pool water; it simply produces chlorine by hydrolysis from the salt dissolved in the pool water.

FEATURES

The advanced IoT enabled pool monitoring system connects seamlessly to the Smart Life app, allowing you to monitor critical parameters such as pH, temperature, ORP (Oxidation-Reduction Potential), and salinity in real time. With the ability to respond intelligently to these sensor readings, the system can automatically control your pool pump, ensuring optimal water quality and safety.

1. Real-Time Alerts: Get instant notifications for pH, temperature, ORP, and salinity to maintain optimal water quality.
2. Pump Operation Status: Receive instant notifications when the pool pump starts or stops for real-time updates.
3. Connection Status Alerts: Get notified if the app loses connectivity to IoT devices or the internet.
4. Remote Control: Manage your pool's settings and check system status from anywhere, even remotely.
5. Automated Scheduling: Schedule maintenance tasks and automate chemical dosing for effortless pool upkeep.
6. Seamless Integration: The app easily connects with various Smart Life IoT devices for effortless pool management:

- Automatic pool chemistry control
- Automatic pool device control: **light, heater & others**
- Easy upgrade the pool to automatic processes
- Monitor pool status
- IOT connection

INSTALLATION

ACCESSORY CABLES



For more details see the Emaux YouTube tutorial:
<https://youtu.be/mly8ECtZgK8?si=Pk-c-WGpz9dNAime>

Open the cover

Lay the controller on a flat surface. Loosen two screws. Gently prise the cover up and move it forward



Internal connections:

The Pool Station Controller can connect up to 3 dosing pumps through the Hot contacts), and one Pool Pump plus three further accessories through the Cold contacts, and a motorised pool cover.




Flow switch



Temperature sensor

Feed the Flow switch and the temperature probe cables through the rubber grommet, tie knots in them, and connect them.

Note: Turn the 'ON/OFF' switch to 'OFF', after flow Switch wires have been connected.

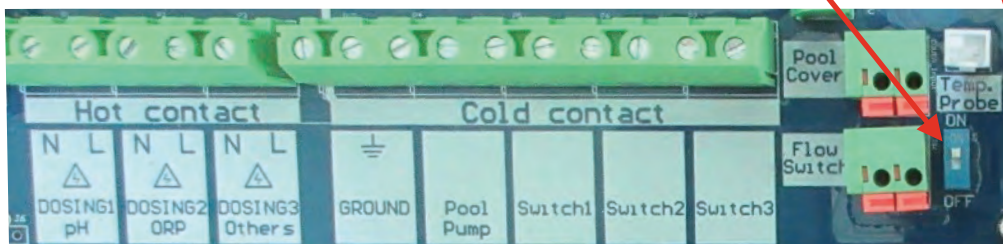

Hot contact vs Cold contact

Hot contact (Dosing pump): This connector provides the same voltage as the power supply for this series of chemical controllers. CyberSync dosing pumps can be directly connected to the L/N terminals.


Device power > 0.2A (230V, 50W, 120V 25W)



Cold contact

(Device relay):

The contacts are only switches. Max 2A, 240V. External devices drawing over 2A must be connected through a relay.

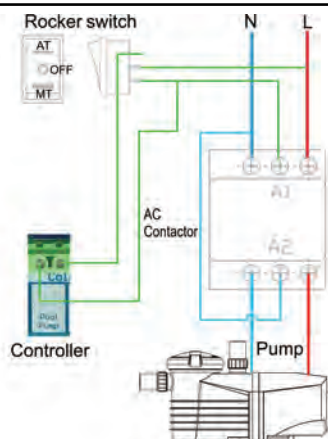

Lighting and/or other peripherals drawing over 2A

note: after pump connected and activated pump switch's function, turns the flow switch to be "ON" to deactivate its function


- Replace the cover ensuring the rubber grommet is correctly seated.
- Install the control unit on a wall ensuring the cables will reach the probe holder and the flow switch housing.

INSTALLATION

HARDWARE




For more details see the Emaux YouTube tutorial:
<https://youtu.be/mly8ECtZgK8?si=Pk-c-WGpz9dNAime>

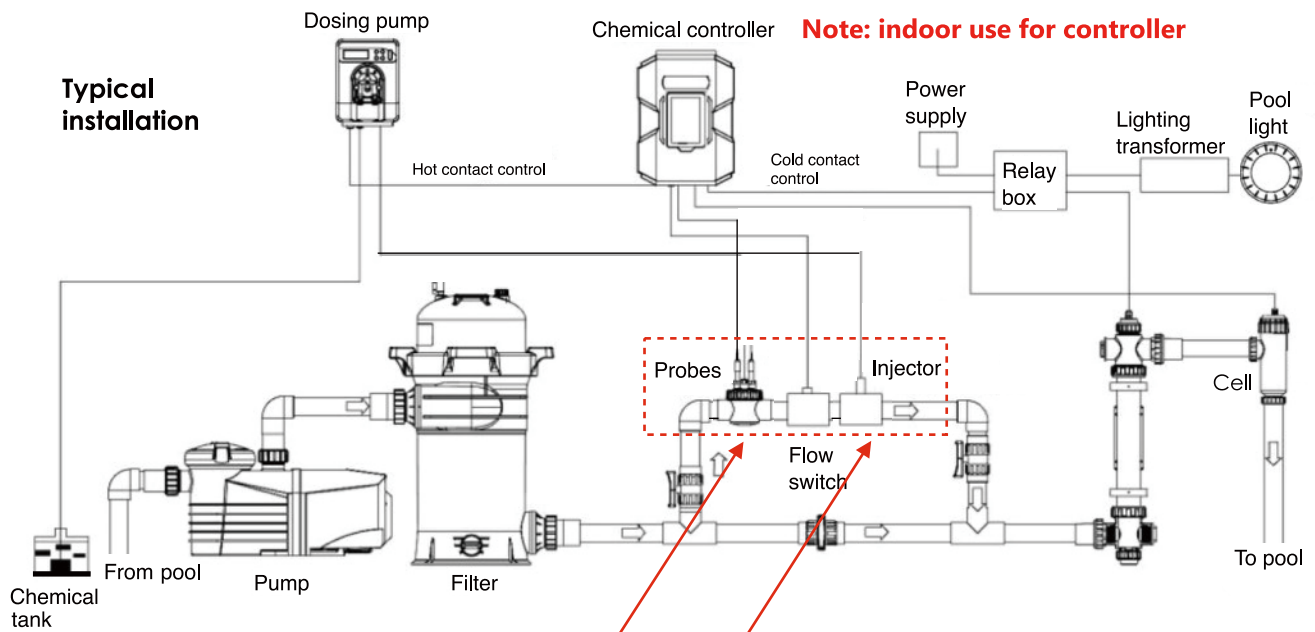

Probes holder should be installed **BEFORE** the injectors so that they measure the **untreated** water (true water conditions). Chemical injectors must be positioned **after** the probe, so that dosing does not distort the pH reading.

Probe holder

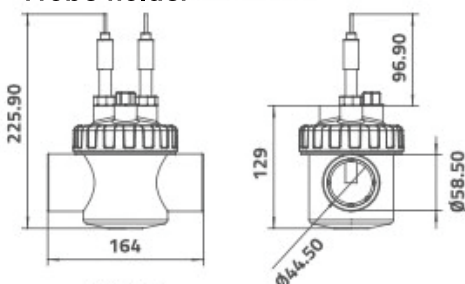

For more details see the Emaux YouTube tutorial:
<https://youtu.be/mly8ECtZgK8?si=Pk-c-WGpz9dNAime>

The probe holder fits 1½" (38mm) pipes. For 2" pipes, use reducers.


Glue the probe holder into the PVC pipe in any direction.

NOTE: In the direction of flow it must be installed **BEFORE** any injectors, see schematic above.

Probes: Slide the threaded adapter and O-ring onto the probe. Wrap teflon tape round the adapter thread. Install the probes in the holder.

For PH and ORP probe, remove the storage boot before use and keep for future storage

Attention: the probes should never dry out and must be kept wet if stored (when emptying the pool for winterising, make sure to store the probe head in water).

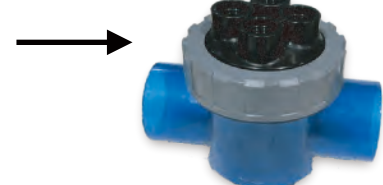

Flow switch




The flow switch holder fits 2" (55mm) pipes. The switch ensures that power to the electrode is switched off if the water is not moving through the cell housing. This prevents any danger of explosion from gas or steam pressure building up in the housing.

1. Glue the flow switch holder into a PVC pipe in the correct direction of the water flow (an arrow is moulded on the switch holder).
2. Remove the 2-part protective cap from the flow switch and screw it into the body.

HARDWARE


Control unit

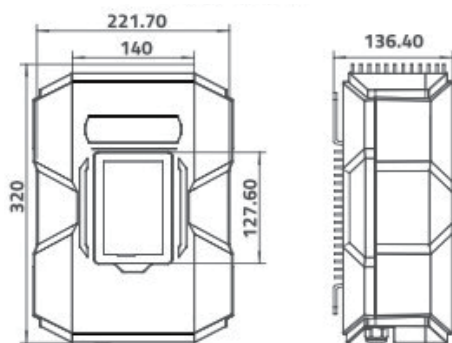

Three self-tapping screws and wall plugs are provided for fast and simple installation. Simply hang the chlorinator on the wall via the bracket on back of the control box.



Chlorinator cell

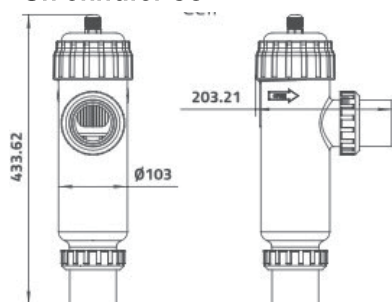


The chlorinator cell comes with unions for 1½" (38mm) and 2" (55mm) pipes.


The cell housing should preferably be installed on a bypass so that filtration does not need to be interrupted when servicing or adjusting your Emaux CyberSync Pool Station.

Cell housing

The cell housing can be installed vertically or horizontally

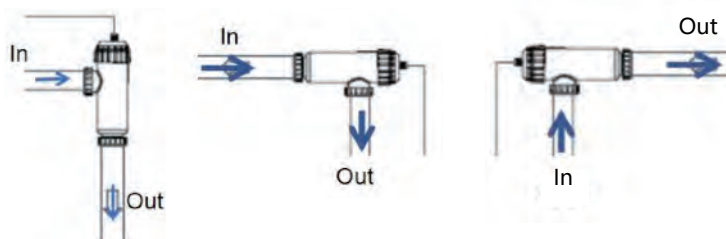

but not in these positions:

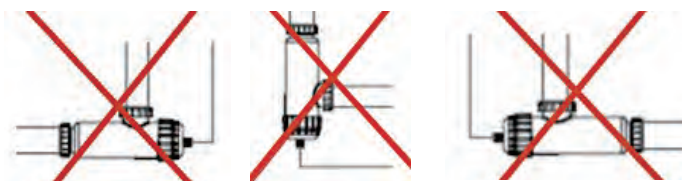

CONNECTING THE PROBES



CONNECTING THE CELL

After the chlorinator cell has been installed, connect the cable. Note the alignment markings.



CONTROLS AND SETUP

Home screen

1. Clock

2. Wifi, freeze

3. Error code

4. Electrolysis

5. pH

6. ORP

7. Salinity

8. Temperature

9. Pump relay status

10. Dosing pump relay status

11. Flow switch, cover

12. Menu

13. Device relay

Pool condition Ideal values

- pH *must* be within range 7.2 to 7.6 for the chlorine to work.
- ORP 650mV to 750mV, approximately equivalent to Chlorine 1.0 to 3.0 ppm. (temperature dependent)
- Salt 3000 to 5000 ppm
- Temperature: personal preference

1. Clock: synchronises with smart phone when Internet is connected
2. WiFi connection status and Freeze status
3. Warning information (ref to page 15 maintain section)
4. Electrolysis (chlorine production)
5. pH
6. ORP
7. Salinity
8. Temperature
9. Pump relay status
10. Dosing pump status
11. Water flow (red: no flow; green: ok.)
- Pool cover: icon show when closed, electroysis rate reduce 50%
12. Menu


Dosing pump relay status:

- On/Auto
- Schedule
- Stop
- Deactivate


Climate adjustment: In high temperature climates algae and bacteria grow faster but water conductivity is higher and the hydrolysis produces more chlorine. In low temperature climates, salt water conductivity is low but algae and bacteria don't grow so well so less chlorine is needed and the chlorine percentage can be adjusted to an ideal rate.

SET UP

Press Menu
button to go to
setup menu

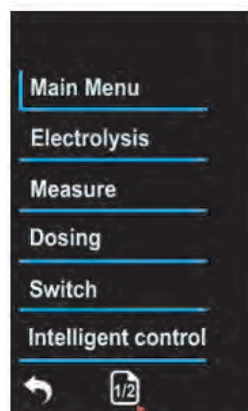




back

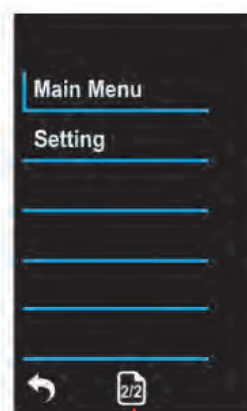

press for next page

Electrolysis

- 1) Selected cell : 20g / 30g / 40g (It refers to the dip switch setting of the main board)
- 2) Level: you can adjust this option to change duty cycle so to reduce the chlorine production
- 3) Winter mode: when winter mode is activated, chlorine production reduce to 85%
- 4) Water mode:
 - a) Normal: Designed for everyday used
 - b) Hard: Ideal for tougher water condition
 - c) Intensive: For maximum protection and performance
- 5) Set Upper and Lower of the value: setup the acceptance level for the chlorine production.
- 6) Schedule: 4 schedule time setting for user to provide the chlorine production

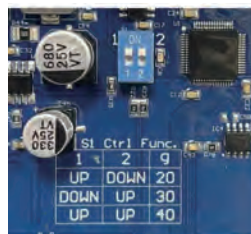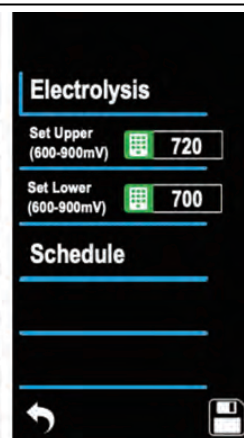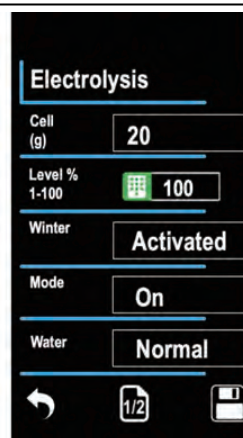


Select suitable
20g / 30g / 40g setting
on the main board

Measurement

User from probe: pH, ORP, Salinity and Temperature setup and calibration.

1. Function: you can turn on/off the function
2. Offset: fine tuning the reading without calibration if Necessary valid range for individual offset value
 - a. pH : -1.5 to + 1.5 @0.1pH
 - b. ORP : -50 to + 50 @1mV
 - c. Salinity : -1000 to + 1000 @1ppm
 - d. Temperature : -9 to + 9 @ 1 °C
3. Calibration: The pH and ORP probes are factory calibrated but recalibration is recommended from time to time. See page 15 MAINTENANCE for details.

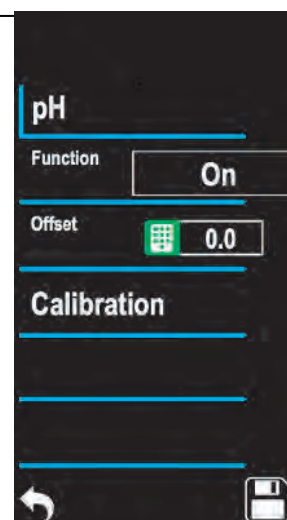

DOSING

There are three dosing pump can be connected.

1)Type:

- a. Dosing 1: ACID / Others
- b. Dosing 2: Chlorine
- c. Dosing 3: Alkaline / Others

2)Dosing mode:


- a. Schedule / ON / OFF / Deactivated

3)Setting

- a. Upper and Lower limits
- b. Pump rate
- c. Duty cycle

4)Priming: Press and hold the "Priming" button, the button will change to blue color and the relay switch will close which to let the connected dosing pump continuously. User need to check the dosing pump tube. The dosing pump stop after the "Priming" button is released.

5)Schedule: 4 schedule time setting for user to provide the dosing setting

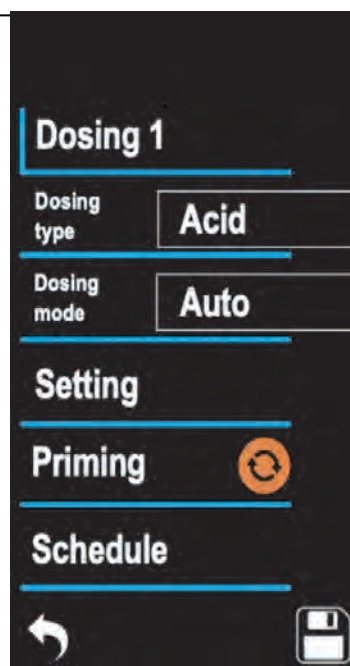

	Dosing 1	Dosing 2	Dosing 3
Dosing type	Acid / others	Chlorine	Alkaline/ others
Auto dosing*	Yes (pH value) User input: - Pump rate	Yes, (ORP value) User input: - Pump rate	Yes (ph value) refer to dosing 1
Manual dosing (on)	Yes User input: - Duty	Yes, User input: - Duty	Yes User input: - Duty
Dosing control range setting	Yes, pH - Alert when out of range	Yes, ORP - Alert when out of the range	No
Off the device	Yes	Yes	Yes

* if user input is incorrect the chemical control will adjust the dosing rate automatically.

Default and general setup (for use with salt chlorinator)

- 1) Dosing 1(pH): Deactivate
- 2) Dosing 2 (ORP): Deactivate
- 3) Dosing 3 (Others): Deactivate
- 4) Electrolysis : OFF

While installing the equipment such as dosing pump or electrolysis cell, the user needs to configure the settings in the CyberSync PoolStation.

SWITCHES

Pump Switch


PUMP SWITCH defaults to user connection to pool pump. When the switch is activated, the pump can be connected and the user can connect the pump and schedule the circulation to run automatically.

User can connect the circulation pump to the connector and turn the pump on/off automatically by schedule.

NOTE: Variable speed pumps have their own built-in schedule controllers.

- 1) Mode: On, Schedule, deactivated, Off
- 2) Schedule: the pump can be configured for 4 schedule times
- 3) Freeze: freeze protection function.



⚠ If the water temperature is displayed near to freezing point, turn on the circulation to prevent ice formation.

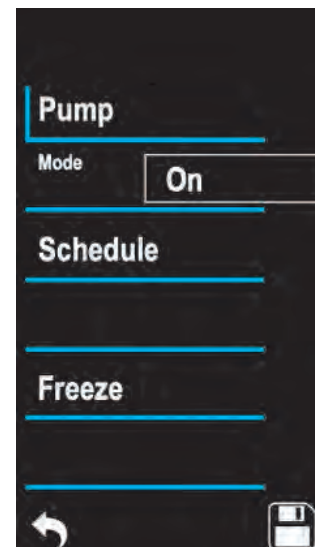

Switches 1 - 3

Switches 1 to 3 can be freely configured for other devices and accessories such as lighting, heater, etc.

Devices can be set to an on/off schedule as required.

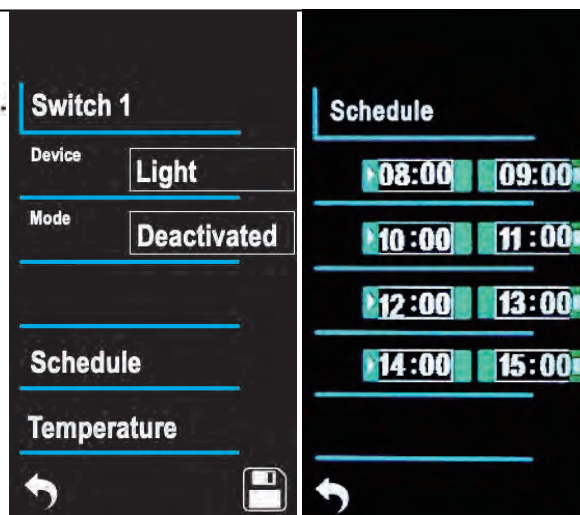

Troubleshoot



FREEZE	FREEZE : Water temperature is too low.
FLOW	FLOW: No water flow is detected
CHK D1	CHK D1: Chemical dosing function abnormal
CHK D2	CHK D2: Chlorine generation function abnormal
CHK D3	CHK D3: Chemical dosing function abnormal
CHK pH	CHK PH: Check D1 and D3 connection
CHK ORP	CHK ORP: Check D2 connection
CHK CELL	CHK CELL: Check water level of the cell (Stop Electrolysis)
CHK LEVEL	CHK LEVEL: Cell is not function, check salinity of the pool (Do nothing)
CHK DRV	CHK DRV: Check power driver connection
LOW SALT	LOW SALT: The salinity of the pool is insufficient; it is recommended to add salt.

IOT SMART LIFE PLATFORM

The CyberSync chemical controller can be connected to the SmartLife app to enable control and monitoring of the pool condition anytime and anywhere. Follow the general installation and setup guide to install “SmartLife” and add devices.


Network

Ensure a 2.4G WiFi router network is ready. Check that the device has connected to internet - the WiFi icon will be displayed on the main screen.

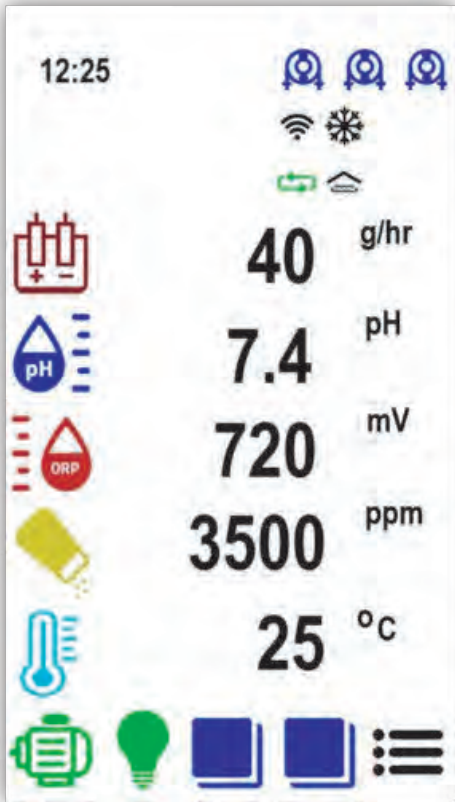
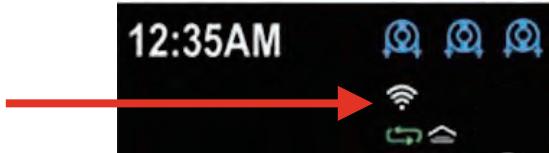


Device status

ON	Status: ON (By manual input)
OFF	Status: OFF (By manual input)
SCHEDULE	Status: ON (The relay status is ON when the schedule is enabled and the current time falls within the defined operating range)
SCHEDULE	Status: OFF (The relay status is OFF when the schedule is enabled and the current time is out of the defined operating range)
AUTO	Status: ON (The relay status is ON when the corresponding sensor data meets the defined operating condition)
AUTO	Status: OFF (The relay status is OFF because the detected sensor data is outside the defined operating range)
DISABLE	The function of this relay is deactivated

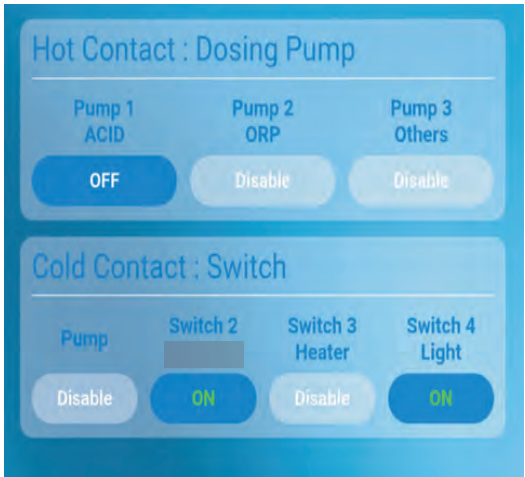

Setting Menu – Go to Menu

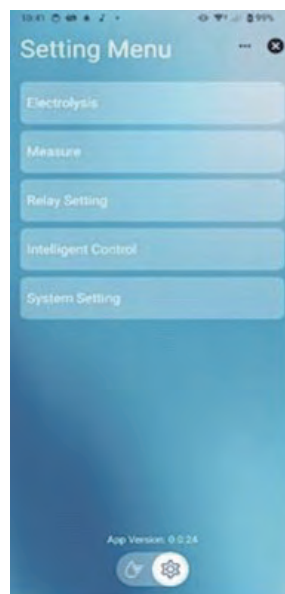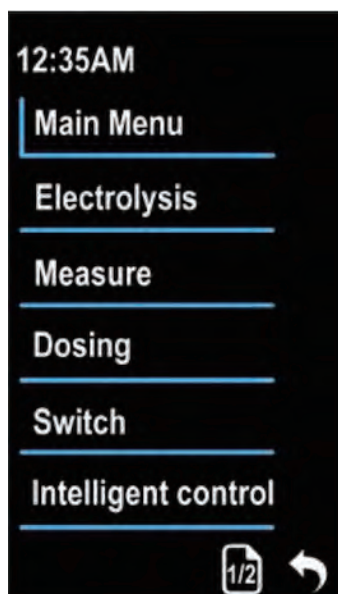

Menu screens, device and App are synchronised:

- App is able to modify display name on portable device for higher flexibility of control
- Device screen: Some functions such as Priming, Probe calibration, Dosing on/off are functions that must be controlled on-site in device only.

Setup procedure:

1. Install SmartLife app from GooglePlay or Android Appstore. Depending on your telephone brand, the PlayStore / AppStore screens may look slightly different.

Android (PlayStore)	iOS (AppStore)

2. Register and login to SmartLife (3rd party account)

3. Add a device:

- a. Prepare a Wi-Fi 2.4G Internet network
- b. On the mobile device, open the App Smart Life app
- c. Power up Cybersync, on the WiFi Setup manual
- d. The icon will change to blue.
- e. In the main page of the app, select "add device" and follow the on screen instructions
- f. Your Cypersync will show on the screen when detected.

NOTE: For details for SmartLife function, please refer to to the SmartLife app user manual.

SALT

ADDING SALT TO THE POOL WATER

The amount of salt required is between 4000 and 6000 ppm. To reach the desired salt level required by your model in a new or refilled pool (including the balance tank), add:

- 1 kg of pool salt per m³ (1,000 litres) of water.
- 2.2 pounds of pool salt per 264 USA gallons of water

Before adding the salt into the pool, place the multiport valve on "Filtration" or "Recirculation" and then turn the filtration pump on.

- Add the salt directly into the pool evenly around the pool. Do not allow the salt to sit in a pile on the floor of the pool.
- Do not add large amount of salt near the skimmer or near the main drain or spa suction drains, it will block the pipes or damage the pump.
- Wait several hours until most of the salt has dissolved
- Keep the filtration system running for 24 hours using the Main Drain or vacuum port as a main suction line.
- The only way to remove the salt in the pool water is to partially drain the pool and refill with fresh water.

Typical salt quantity for 4000 ppm

Volume m ³	Salt kg	Volume Gall US	Salt pounds
10	40	2,642	88
15	60	3,963	132
20	80	5,283	176
25	100	6,604	220
30	120	7,925	264
35	140	9,246	308
40	160	10,567	352
50	200	13,209	440
60	240	15,850	528
70	280	18,492	616
80	320	21,134	704
90	360	23,775	792
100	400	26,417	880

Overflow pools: be sure to include the volume of the balance tank.

NOTE: At low salinity mode, e.g. 1000 ppm, the production of disinfectant drops to ~50%. The low salinity mode will not shorten the life of the cell.

Salt is not lost through evaporation. Much of the hypochlorous acid returns to salt after disinfection, but not all of it, and some is lost through:

- Backwashing, splashout, and heavy rain
- UV sunlight breaks down chlorine into gases that escape the pool
- Bather load → sweat, urine, cosmetics consume chlorine into non-recoverable byproducts

Occasional topping up is therefore required.

TYPE OF SALT

Only use salt that is specially refined for use in pools. Obtain pool salt from your pool dealer.



Do NOT use these types of salt:

Salt with additives or impurities and food grade salt will cause early cell failure.

1. Rock salt.
2. Salt with more than 1% yellow prussiate of soda
3. Salt with more than 1% of anti-caking additives
4. Iodized salt
5. Supermarket or catering food grade salt

MAINTENANCE

CLEANING THE TITANIUM SALT CELL

 Wear protective clothing!

You need:

- Proprietary cell cleaning fluid
- or
- diluted hydrochloric (muriatic) acid
(always add acid to water)

1. Turn off the filtration system.
2. Unplug the salt cell cable from the control unit.
3. Remove the salt cell from the housing.
4. Fill salt cell cleaning fluid or dilute hydrochloric (muriatic) acid into a plastic bucket
5. Add the salt cell to the cleaning mixture avoiding contact with the terminals.
6. Wait five to ten minutes for the lime scale (calcium) to be fully dissolved by the cleaning fluid or acid.
7. If any parts of calcium are stuck or will not dissolve, carefully remove them with a smooth plastic instrument. Do not touch the titanium blades with anything made of metal.
8. Once the salt cell is clean, rinse with fresh water and place back in the housing and tighten the cell or collar.
9. Reconnect the cell cable to the control unit.
10. Turn system back to automatic setting or timer. Dispose of cleaning mixture.



If the salt cell has a heavy deposit of calcium that has not been removed after ten minutes in the cleaning solution, we recommend using a "Cell Cleaner" product which is not as corrosive as hydrochloric acid. The cell can then be left in the cleaner for up to a hour and will completely remove the calcium.

We recommended using Salt Cell Cleaner at all times over the traditional Hydrochloric mixture, it is a safer alternative and not harmful to your salt cell at all and reusable.

CLEANING AND CALIBRATING THE PROBES



For more detailed instructions for calibrating the probes see the Emaux YouTube video:
<https://youtu.be/mly8ECtZgK8?si=Pk-c-WGpz9dNAime>

You need:

- Distilled or deionized (demineralized) water
- Soft wipes
- pH buffer 4.01 and 7.0
- ORP buffer

Please refer to the manual that came with the probe.

Hard water: Check the probes occasionally for calcium deposit (limescale). Remove hard deposits very carefully with a smooth piece of plastic.

Cleaning the probes can be combined with the recalibration process. Always use distilled water and very soft wipes (optical quality for glasses and camera lenses)

SPECIFICATIONS

Using Environment

Working Temperature:10-45°C
 Max.Working Pressure:2.5bar
 Water Flow Switch Min. Flow:3m³/hr
 Max.Operation Time:24h

Product Specifications

CYBER SYNC POOL STATION						
Code	Model	Input Voltage/ Frequency	SALT LEVEL PPM	OUTPUT gram/hr	POOL VOL m³	FUNCTION
9130601	CS-A20	110-240V 50Hz/60Hz	3000/1000	20/10	60	electrolysis, measurement, dosing , switch , control,
9130602	CS-A30	110-240V 50Hz/60Hz	3000/1000	30/15	80	
9130603	CS-A40	110-240V 50Hz/60Hz	3000/1000	40/20	100	

FUNCTION	SPECIFICATION
Display	4.3" LCD with Touch control
Cell type (chlorine production)	20 g/h , 30 g/h or 40 g/h
Measurement	pH, ORP, Salinity and Temperature
Device connection	Dosing pump: x 3 (hot contact); pump sw +@50W Switch: x 3 (cold contact)
Pool cover detect	Detect connetion x 1
Wi-Fi	- 802.11 b/g/n - 2.4 GHz
Modbus	RS485
Input	220V to 240V AC, 2A max (EU version) 110V to 120V AC, 2A max (US version)
Safety class	Class II (double insulated)

Probe and Accessories Specifications

Code	Product	Parameter
106090073	ORP probe (with 3 m signal line)	Pressure: 7 bar Material: epoxy Measuring range: -300 to 900 mV
106090073	pH probe (with 3 m signal line)	Pressure: 7 bar Material: epoxy Measuring range: pH 0-14
178818	Salinity probe (with 3 m signal line)	Pressure: 7 bar Material: epoxy Measuring range: 1000 to 35000 ppm
178817	Temperature sensor with 3 m cable	epoxy
1090010392	ORP buffer solution, 30 mL	256 mV,
109007168	pH buffer solution, 30 mL	pH 4 .01 and pH 7.0
E130078	Probe holder	PVC transparent
114145332	Flow switch	Normal open
620065469	Flow switch Holder	PVC

You will need this information if you require service for your product

PRODUCT	
MODEL	
SERIAL NUMBER	
DATE OF PURCHASE	
DEALER	

WARRANTY

As the original purchaser of the equipment you have purchased through an authorized international distributor or dealer, Emaux Water Technology Co Ltd, warrants its products free from defects in materials and workmanship under normal use during warranty period. The warranty period begins on the day of purchase and extends only to the original purchaser. It is not transferable to anyone who subsequently purchases the product from you. It excludes all expendable parts.

During the warranty period, Emaux authorized reseller will repair or replace defective parts with new parts or, at the option of Emaux, serviceable used parts that are equivalent or superior to new parts in performance. This Limited Warranty extends only to products purchased from Emaux authorized resellers. This Limited Warranty does not extend to any product that has been damaged or rendered defective

- (a) as a result of accident, misuse or abuse;
- (b) as a result of an act of God;
- (c) by operation outside the usage parameters stated herein;
- (d) by the use of parts not manufactured or sold by Emaux;
- (e) by modification of the product;
- (f) as a result of war or terrorist attack; or
- (g) as a result of service by anyone other than Emaux authorized reseller or authorized agent.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, EMAUX MAKES NO OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. EMAUX EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS EXPRESS LIMITED WARRANTY.

NOTES

Make notes of your settings or keep a log of your maintenance schedules.

EMAUX WATER TECHNOLOGY CO., LTD
ADDRESS: 2/F, Lockhart Centre, No. 301-307
Lockhart Road, Wanchai, Hong Kong
Phone +852 2832 9880

 **YOUR PREMIER SUPPLIER**

www.emauxgroup.com